

## Appendix 2 ( Self installation guides)

### Lifeline - Self Installation guide – Vi Unit ( for Landline Telephones

All cables have been plugged into the unit for you already. Please do not remove these.

#### STEP 1




Plug the WHITE telephone cable into the main telephone point

#### STEP 1A



If there's an ADSL filter, unplug the telephone from it and plug the white end of the telephone cable into the 'Phone' socket on the filter. Next, plug the transparent end into the socket labelled 'LINE'.

#### STEP 2

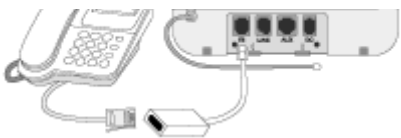

. Now you can plug your telephone (or splitter) into the adaptor.

#### STEP 3



Finally, plug the other end into your mains power socket. Make sure your mains power is switched on. Once completed, please press your pendant (red button) to make a test call. The unit will tell you that an emergency call has been made. Our Control Centre team will answer your call. Let them know you are doing a test call and they will close the call down